

Installation Instructions



Microcement Kit



Please ensure all tradesman working on or around the installation have consulted these instructions.

Installation Overview


These instructions assume the wet room has been correctly designed and that all plumbing work complies with current building regulations. They cover the most common level-access installations on suspended timber and solid concrete floors. For raised floor applications, these instructions should be followed where applicable.

The Maxxus is a load-bearing deck capable of supporting loads of up to 470kg over 400mm joist centres without deflection and therefore does not require under-boarding.

Only fully waterproof microcement systems are recommended for use with our products. Traditional porous microcement systems that rely solely on surface sealers for water resistance may be susceptible to moisture absorption, potentially causing staining or discolouration around the drain.

Installation on Timber Floors

1. Remove the floorboards to expose the joists in the area where the deck is to be installed.
2. Inspect the existing joists, if necessary, carry out any remedial work to ensure the floor structure is rigid and free from movement.
3. Where joist centres are 400mm or less, the Maxxus can be installed directly onto the joists without under-boarding.
4. If joist centres exceed 400mm, additional noggins must be installed to provide adequate support.
5. All edges of the deck must be fully supported.
6. Position the tray and consider the waste location and pipe connection.
7. Connect the waste using the method shown overleaf.
8. Pilot drill and countersink holes and securely fix the Maxxus using suitable wood screws.
9. Check that the tray is level and completely free from movement.
10. If any movement is detected, install additional fixings as required.

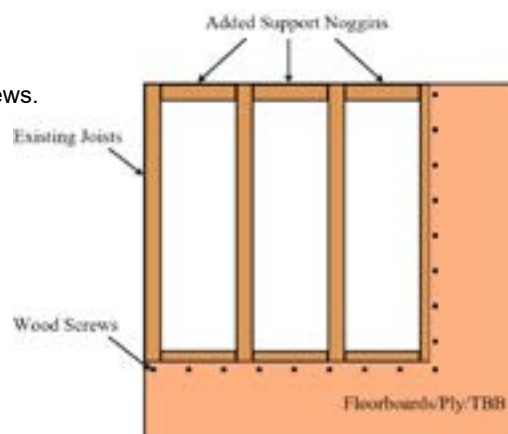

Installation on Existing Concrete Floors

1. If inset into the floor, the area beneath the deck must be cut and excavated to accommodate the deck, drain, and waste pipework.
2. Refer to the waste installation method shown overleaf before connecting the bottom section of the drain to the pipework.
3. Bed the deck onto a suitable layer of tile adhesive or sand and cement, then complete the drain installation.
4. Check that the deck is level and allow the bedding material to fully cure.
5. Pilot drill and securely screw down the deck.
6. Check to make sure there is no movement and that the tray is level.
7. Use additional fixings if movement is detected, screw heads must be countersunk into the tray.

Drain Installation Instructions




Measure Maxxus drain location and then connect section (7) of the gulley to the waste pipe using solvent-weld adhesive centrally underneath the hole of the deck. The gully seal section (6) is pre installed in the gully bottom section.

Support the underside of the gulley with a cross-batten or board to eliminate any movement




Push gulley section (4) firmly inside the middle section (5) until they click together.

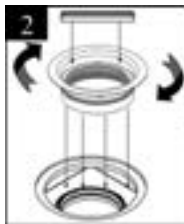

Lay Maxxus over and secure.

Screw through gulley section (5) and tighten using the installation tool

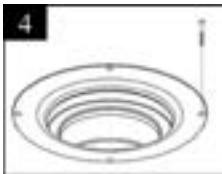

Pilot section (4) and screw down using the supplied screws. Do not use power tools.


Insert the NOOD water trap.

Components Required

Disregard any other parts that may have been included in the drain box



Micro Cement Grid Installation Instructions

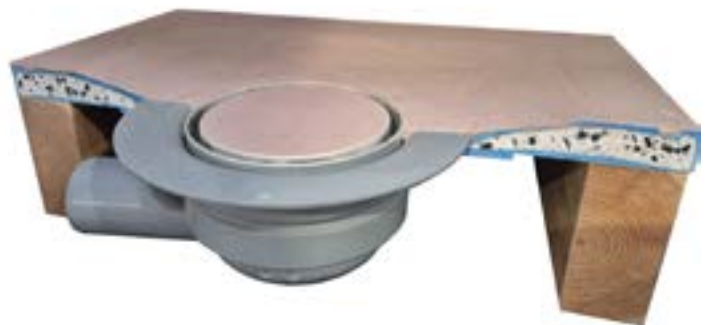

1. Install the drain into the tray/floor.
2. Locate the grid into the drain, ensure the grid is seated correctly and level with the top of the drain.
3. The inner grid is designed to be filled with microcement when applying microcement to the floor.