



Thank you for choosing a Beta bespoke frameless shower screen. Every enclosure is individually manufactured to combine modern styling, precision engineering, and long-lasting performance.

To ensure the best possible installation and finish, please read these instructions fully before beginning assembly or fitting. We strongly recommend checking all components carefully upon delivery and before installation starts.



Contents

- A** Installing a Fixed Screen
- B** Installing Wall Mounted Hinged Screen/Door
- C** Installing Fixed Screen and Flipper Panel
- D** Installing a Corner Enclosure
- E** Installing an Alcove Enclosure
- F** Installing a Walk-Through Screen

Before You Begin

Please inspect all supplied parts and packaging for any signs of damage or missing items. If anything appears incorrect, contact us before proceeding with installation.

These instructions cover both left-hand and right-hand configurations where applicable.

Handling & Care

Glass and metal components should always be handled with care.

Wear appropriate personal protective equipment (PPE), including safety gloves, safety footwear and eye protection during handling and installation.

Avoid knocking or placing glass directly onto hard surfaces.

Always rest glass on suitable protective material during installation.

Take care not to damage plated or finished surfaces when unpacking or assembling components.

Keep all glass away from sharp impacts, especially around corners and edges.

Large glass panels should be lifted and handled by a sufficient number of people using suitable lifting equipment where required.

Pre-Installation Checks

Before installation, ensure the following areas are suitable and prepared correctly:

Walls should be level, plumb, and structurally sound.

Shower trays or wet room floors must be fully supported and level.

Any uneven surfaces or voids beneath fixing points should be corrected before fitting.

Installation Guidance

We recommend carrying out a dry fit of the enclosure before final assembly. This allows all fixing positions, alignments, and clearances to be checked accurately.

When cutting aluminium profiles:

Protect visible surfaces with masking tape before cutting.

Use appropriate tools for clean cuts.

Carefully smooth all cut edges before assembly.

Where Easy-Clean coated glass is supplied, ensure the coated surface faces the inside of the showering area.

Fixings

Fixings are not supplied with Beta shower screens. Due to the wide variety of wall constructions, substrates, and installation surfaces, no single fixing type is suitable for every application.

It is the installer's responsibility to ensure that suitable fixings and installation methods are used for the specific wall or floor construction being fitted to. All fixings used must be suitable for the substrate and capable of supporting the weight of the glass and hardware safely and securely.

Important

Do not begin installation until these instructions have been read and understood fully.

A

Installing a Fixed Screen

A single shower screen is typically installed using a wall channel, together with a top support brace for stability.

A wide range of alternative fixing and support options are also available depending on the design and installation requirements of your enclosure.



Wall Channel



- Cut the channel to length where necessary.
- Carefully file the cut edges smooth.
- Position, mark & drill the channel & wall (min. four fixings over 2000mm).
- Apply a continuous bead of silicone to the rear of the channel.
- Securely fix the channel to the wall.
- Apply a continuous bead of silicone inside the channel.
- Carefully insert the glass screen inside the channel.
- Fit the gasket to the wet side of the glass where supplied.

Some channel finishes used with 10mm glass may not require a gasket. In these cases, the glass should be secured using silicon only.

Support Brace



- Support braces can be installed either straight or angled.
- Measure and cut the support bar to the required length.
- Securely fix the wall bracket into position.
- Loosely assemble the support brace and clamp onto the glass.
- Check alignment before fully tightening all grub screws and fixings.

Securing Screen to Floor or Tray



- The shower screen should be secured to the tray or tiled floor using a continuous bead of silicone applied along the inside (wet side) of the glass.
- Allow the silicone to fully cure before use.

Wall Mounted Hinged Screens/Doors

Wall mounted hinged screens and doors are typically installed using two wall-mounted hinges secured directly to the wall.


The hinges feature an adjustable self-latching mechanism, allowing the closing position of the door to be set as required.

Translucent push-fit seals are supplied where required and can be trimmed to size during installation.

Doors are supplied with a matching door knob. Hinged screens are supplied without a door knob.



Wall Hinges

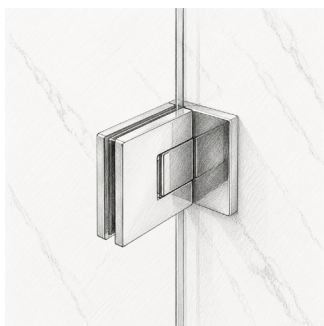

- Remove the hinge cover plates to access the grub screws/fixing holes.
- Insert the correct gasket for the glass thickness being installed;
- 8mm glass - use 8mm gaskets.
- 10mm glass - use 10mm gaskets
- 6mm glass - use both 8mm and 10mm gaskets together
- Loosen the four main grub screws, slide the hinge into the glass notch.
- Ensure gaskets are fitted evenly to both sides of the glass.
- Align the glass with the back hinge.
- Securely tighten the four main grub screws.
- Position screen in place, rest the glass on the supplied 10mm packers.
- Level the screen and mark fixing positions.
- Securely fix the hinges using all three fixing holes in each hinge.
- Minor adjustment is available within the hinge notches for final alignment.
- On a perfectly level wall, the glass-to-wall gap should be approx. 8mm.
- Hold the screen in the required position and tighten the two smaller grub screws to activate the self-latching mechanism.
- If the self-latching is not required, leave the grub screws loose.
- Refit the hinge cover plates.

Door Knob




- Supplied with doors only.
- Unscrew one side of the knob and remove one of the circular spacers.
- Locate the 12mm hole in the glass and insert the door knob assembly.
- Ensure all three spacers are correctly positioned.
- Securely tighten the door knob by screwing both sides together.

Seals


Seals can be trimmed to the required length and simply push-fit onto the glass.

Bubble Seal

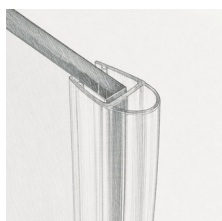


Use between glass and wall

Bottom Seal

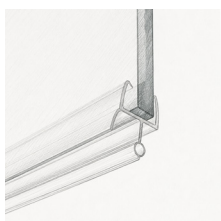


Use on the bottom of glass

Flap Seal

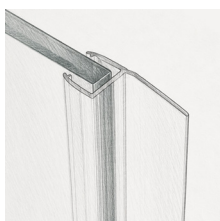


Use on closing side of door if closing onto a wall

90° Seal

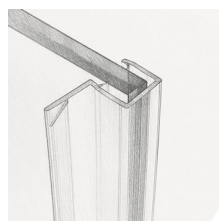

Use on fixed panel if door closing onto it at 90°

180° Seal

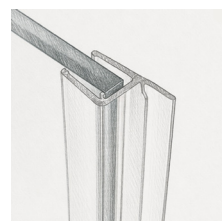

Use on fixed panel if door closing onto it at 180°



Fixed Screen with Flipper Panel


The fixed shower screen is typically installed using a wall channel, together with a top support brace for stability.

The hinges feature an adjustable self-latching mechanism, allowing the position of the flipper panel to be set as required.

Translucent push-fit seals are supplied and can be trimmed to size during installation.



Wall Channel

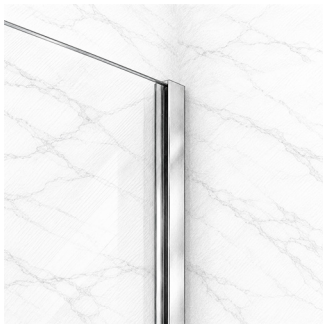

- Cut the channel to length where necessary.
- Carefully file the cut edges smooth.
- Position, mark & drill the channel & wall (min. four fixings over 2000mm).
- Apply a continuous bead of silicone to the rear of the channel.
- Securely fix the channel to the wall.
- Apply a continuous bead of silicone inside the channel.
- Carefully insert the glass screen inside the channel.
- Fit the gasket to the wet side of the glass where supplied.


Some channel finishes used with 10mm glass may not require a gasket. In these cases, the glass should be secured using silicone only.

Support Brace



- Support braces can be installed either straight or angled.
- Measure and cut the support bar to the required length.
- Securely fix the wall bracket into position.
- Loosely assemble the support brace and glass clamp onto the panel.
- Check alignment before fully tightening all grub screws and fixings.


Securing Screen to Floor or Tray

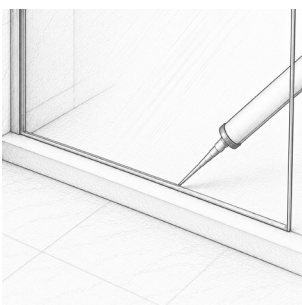

- The shower screen should be secured to the tray or tiled floor using a continuous bead of silicone applied along the inside (wet side) of the glass.
- Allow the silicone to fully cure before use.


90° Glass Hinges

1.

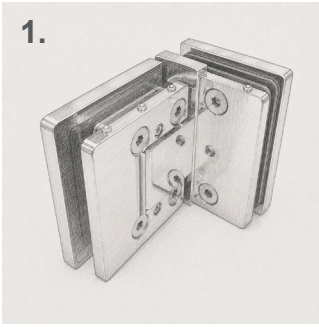


- Remove the hinge cover plates to access the grub screws.
- Loosen the two grub screws on the fixed-panel side of the hinge and remove the rear clamping plate.

2.

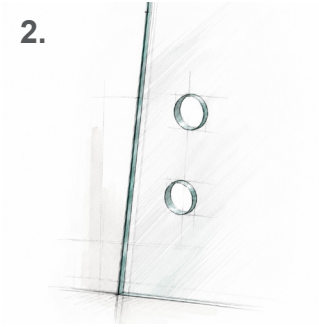


- Locate the pre-drilled holes in the fixed glass panel

3.

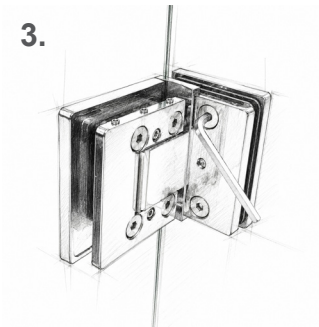


- Fit the hinge to the installed fixed glass panel, ensuring the gaskets are correctly positioned on both sides of the glass. Securely tighten the two grub screws.

4.

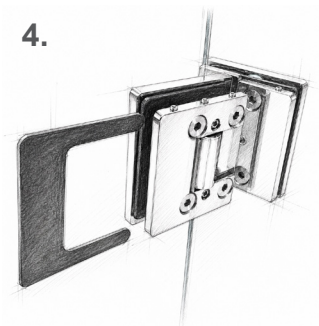


- Insert the correct gaskets for the glass thickness being installed;
- 8mm glass - use 8mm gaskets.
- 10mm glass - use 10mm gaskets.

5.

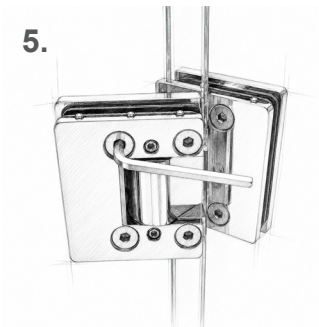

- Loosen the four main grub screws.
- Position the flipper panel so that the notches locate within the hinges.
- Ensure the gaskets are fitted evenly on both sides of the glass.
- Align the glass within the hinge and check the panel position.
- Securely tighten the four main grub screws.
- Minor adjustment is available within the fixing holes and hinge notches for final alignment.

6.

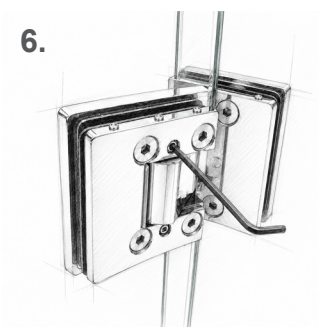

- Hold the panel in the desired position.
- Tighten the two smaller grub screws to set the self-latching position.
- If the self-latching is not required, leave the grub screws loose.
- Refit the hinge cover plates.

Example Corner Enclosure


The fixed shower screen and 90° return panel are typically installed using a wall channel, 90° channel and interlinking support brace.

The hinges feature an adjustable self-latching mechanism, allowing the position of the door to be set as required.

Translucent push-fit seals are supplied and can be trimmed to size during installation.




Wall Channel

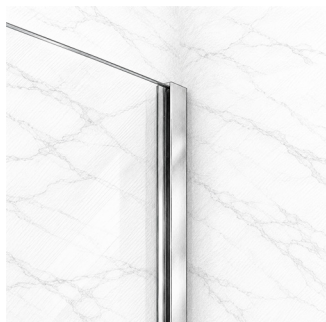

- Cut the channel to length where necessary.
- Carefully file the cut edges smooth.
- Position, mark & drill the channel & wall (min. four fixings over 2000mm).
- Apply a continuous bead of silicone to the rear of the channel.
- Securely fix the channel to the wall.
- Apply a continuous bead of silicone inside the channel.
- Carefully insert the glass screen inside the channel.
- Fit the gasket to the wet side of the glass where supplied.

Some channel finishes used with 10mm glass may not require a gasket. In these cases, the glass should be secured using silicone only.

90° Glass Channel

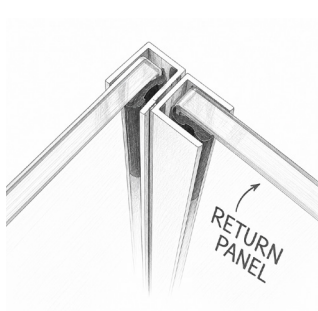

- Cut the channel to length where necessary.
- Carefully file the cut edges smooth.
- Check the channel orientation and dry-fit onto the glass panels.
- Confirm the enclosure layout, panel positions and tolerances.
- Apply a continuous bead of silicone inside the channels.
- Fit the channel onto the glass panels..
- Fit the gasket to the wet side of the glass where supplied.

Some channel finishes used with 10mm glass may not require a gasket. In these cases, the glass should be secured using silicone only.

Securing Screen to Floor or Tray





- The shower screens should be secured to the tray or tiled floor using a continuous bead of silicone applied along the inside (wet side) of the glass.
- Allow the silicone to fully cure before use.

Interlinking Brace




- Designed to support both the fixed panel and 90° return panel.
- Measure and cut the main support bar to the required length.
- Securely fix the wall bracket into position.
- Slide the T-bracket onto the main support bar.
- Loosely assemble the support brace and glass clamp onto the panel.
- Fit secondary support bar between T-bracket and the other panel.
- Check alignment before fully tightening all grub screws and fixings.

Wall Hinges

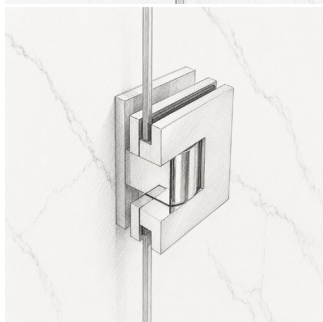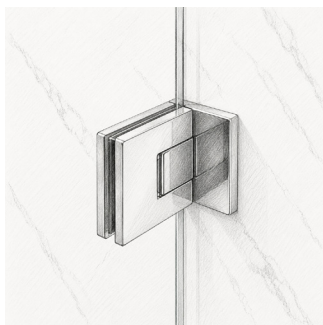

- Remove the hinge cover plates to access the grub screws/fixing holes.
- Insert the correct gasket for the glass thickness being installed;
- 8mm glass - use 8mm gaskets.
- 10mm glass - use 10mm gaskets
- 6mm glass - use both 8mm and 10mm gaskets together
- Loosen the four main grub screws, slide the hinge into the glass notch.
- Ensure gaskets are fitted evenly to both sides of the glass.
- Align the glass with the back hinge.
- Securely tighten the four main grub screws.
- Position screen in place, rest the glass on the supplied 10mm packers.
- Level the screen and mark fixing positions.
- Securely fix the hinges using all three fixing holes in each hinge.
- Minor adjustment is available within the hinge notches for final alignment.
- On a perfectly level wall, the glass-to-wall gap should be approx. 8mm.
- Hold the screen in the required position and tighten the two smaller grub screws to activate the self-latching mechanism.
- Refit the hinge cover plates.

Door Knob

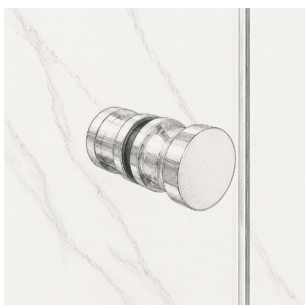


- Supplied with doors only.
- Unscrew one side of the knob and remove one of the circular spacers.
- Locate the 12mm hole in the glass and insert the door knob assembly.
- Ensure all three spacers are correctly positioned.
- Securely tighten the door knob by screwing both sides together.

Seals


Seals can be trimmed to the required length and simply push-fit onto the glass.

Bubble Seal

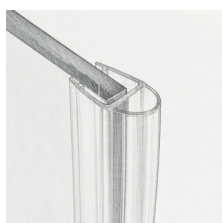


Use between glass and wall

Bottom Seal

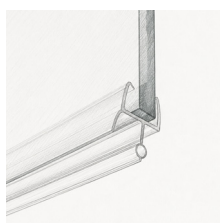


Use on the bottom of glass

Flap Seal

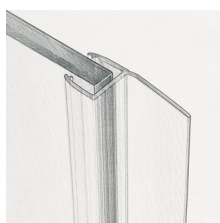


Use on closing side of door if closing onto a wall

90° Seal

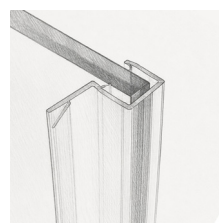

Use on fixed panel if door closing onto it at 90°

180° Seal

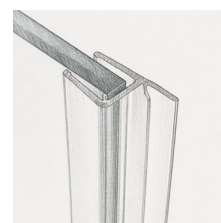

Use on fixed panel if door closing onto it at 180°

E

Example Alcove Enclosure

The fixed shower screens panels are typically installed using a wall channel and support braces.

The hinges feature an adjustable self-latching mechanism, allowing the position of the door to be set as required.

Translucent push-fit seals are supplied and can be trimmed to size.



Wall Channel



- Cut the channel to length where necessary.
- Carefully file the cut edges smooth.
- Position, mark & drill the channel & wall (min. four fixings over 2000mm).
- Apply a continuous bead of silicone to the rear of the channel.
- Securely fix the channel to the wall.
- Apply a continuous bead of silicone inside the channel.
- Carefully insert the glass screen inside the channel.
- Fit the gasket to the wet side of the glass where supplied.


Some channel finishes used with 10mm glass may not require a gasket. In these cases, the glass should be secured using silicone only.

Support Brace



- Support braces can be installed either straight or angled.
- Measure and cut the support bar to the required length.
- Securely fix the wall bracket into position.
- Loosely assemble the support brace and glass clamp onto the panel.
- Check alignment before fully tightening all grub screws and fixings.


Securing Screen to Floor or Tray

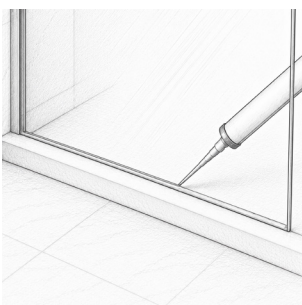

- The shower screen should be secured to the tray or tiled floor using a continuous bead of silicone applied along the inside (wet side) of the glass.
- Allow the silicone to fully cure before use.

180° Glass Hinges

1.

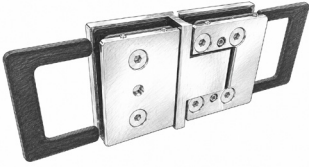


- Remove the hinge cover plates to access the grub screws.
- Loosen the six large grub screws.
- Insert the correct gaskets for the glass thickness being installed;
- 8mm glass - use 8mm gaskets.
- 10mm glass - use 10mm gaskets.

2.



- Fit the hinge to the installed fixed glass panel, ensuring the gaskets are correctly positioned on both sides of the glass.
- Securely tighten the two grub screws.

3.

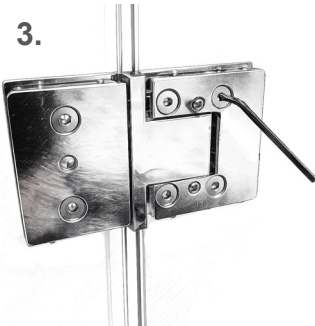

- Position the door so that the notches locate within the hinges.
- Ensure the gaskets are fitted on both sides of the glass.
- Align the glass within the hinge and check the panel position.
- Securely tighten the four main grub screws.
- Minor adjustment is available within the hinge notches for final alignment.

4.




- Hold the door in the desired closed position.
- Tighten the two smaller grub screws to set the self-latching position.
- Refit the hinge cover plates.

Seals


Seals can be trimmed to the required length and simply push-fit onto the glass.

Bubble Seal

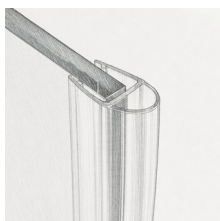


Use between
glass and wall

Bottom Seal

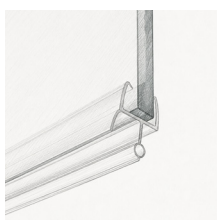

Use on the
bottom of glass

180° Seal

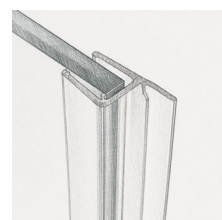

Use on fixed
panel if door
closing onto it at
180°



Walk-Through Screen

The walkthrough shower screen is typically installed using two support braces.




Support Brace



- Support braces can be installed either straight or angled.
- Measure and cut the support bars to the required length.
- Securely fix the wall brackets into position.
- Loosely assemble the support braces and glass clamps onto the panel.
- Check alignment before fully tightening all grub screws and fixings.

Securing Screen to Floor or Tray

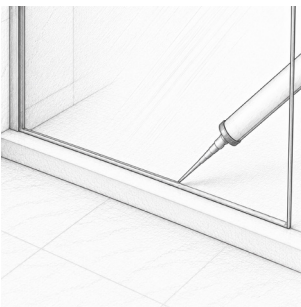

- The shower screen should be secured to the tray or tiled floor using a continuous bead of silicone applied along the inside (wet side) of the glass.
- Allow the silicone to fully cure before use.

Care After Installation

- Allow all silicone to fully cure before use.
- Clean glass regularly with a soft cloth and mild cleaner.
- Avoid abrasive cleaners, pads, and harsh chemicals.
- Dry hardware after cleaning to maintain its finish.
- Check seals and fittings periodically.